

TECHALOGIC

XV-1 Advanced 2K Action Camera




Firmware Update

Techalogic.co.uk

HOW TO UPDATE YOUR CAMERAS FIRMWARE

1. Download the selected .bin file from our support page.
2. Insert the micro SD into your computer and open it to the first page (called the root level)
3. Copy the desired 'FW96670A.bin' file into the root level of your Micro SD card – beside the MotorDV. (The file name should match the .bin name exactly).

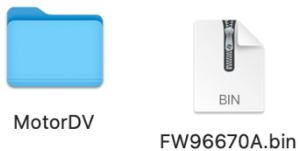

4. Safely eject your SD card from your computer.
5. Place the SD card into your XV-I Camera and power on. Please wait for it to automatically update itself. The light/s will flash erratically for a short while. Once the lights are steady again the update is complete
6. Now navigate to the settings menu in the App and check the firmware version to ensure the firmware has been successfully updated. The current firmware version number is listed on our support page next to where you downloaded the .bin file
7. Finally once updated, delete the .bin file from the sd card otherwise the camera will update every time you power it on

Thank you for choosing Techalogic

If you have any questions regarding the operation of your camera, please don't hesitate to contact us and we will be more than happy to assist you. Tel 0330 2233108



Protect Your Ride, Capture Moments and Share Life